



SuperAP™ 500 Series

Rugged Access Point

Default Settings

Item	Default Setting
SSID	
Single radio models*	wireless
Dual Radio models:	
Radio1(Gold N-connector**)	wireless1 Static AP Mode
Radio2 (Silver N-connector**)	wireless2 Bridge Mode
IP address	192.168.0.1
Netmask	255.255.255.0
Login	root
Password	root
DHCP	off

* IA-12: Antenna points through logo side.

** IA-12DR: Radio1 Antenna points through non-logo side.
Radio2 Antenna points through logo side.

Configuration:

When attaching directly between the managing computer and the AP, a **Crossover Ethernet cable** must be used. For security reasons, AP configuration and management should be done via the LAN port.

Please assign static IP address of 192.168.0.xxx and Netmask of 255.255.255.0 to your managing computer *for initial configuration*.

As a helpful hint, if there is a problem loading any management pages, use <CTRL> Refresh to prevent pages from being pulled from your local computer's cache.

WARNING: The high-power radio in this Access Point requires an attached antenna to function correctly. Running the Access Point with no antenna may damage the radio and reduce maximum radio power.